



ROSETTA® KODAH FIR PIT INSTALLATION GUIDE

BLOCK LAYOUT PATTERN:





FIRST COURSE

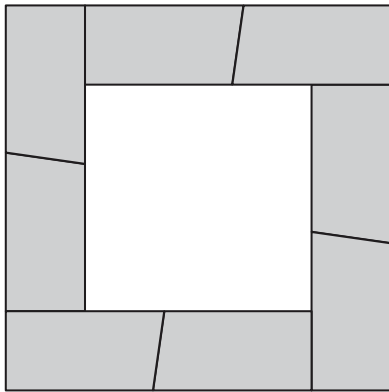

SECOND COURSE

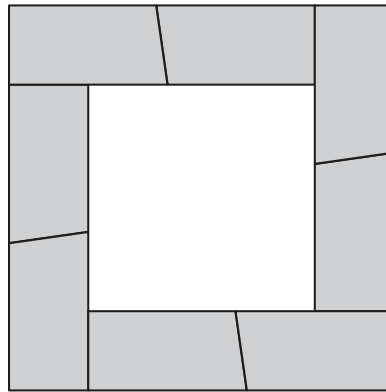

THIRD COURSE

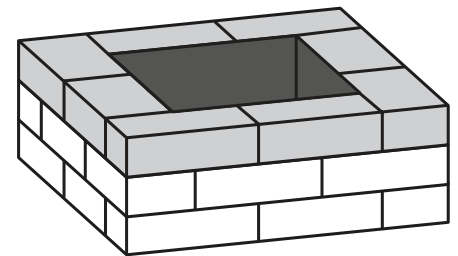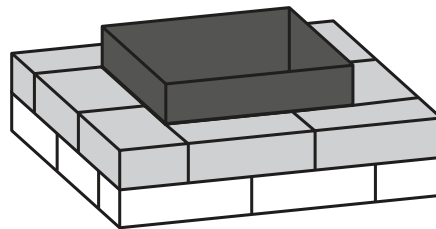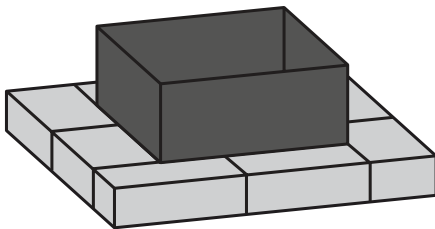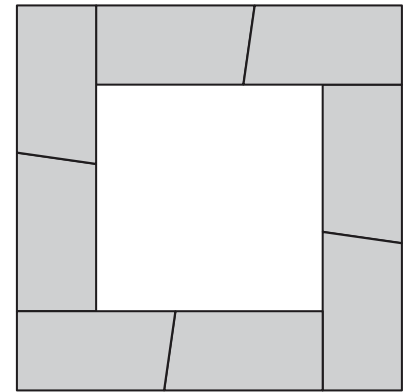

INSTALLATION INSTRUCTIONS:

- Kodah Fire Pit is built from one full pallet of corners
- The dimensions of the fire pit are 51" x 51" x 18"
- The dimensions of the steel insert are 27' x 27'" x 18"

1. Mark out the location for your fire pit. Make the area slightly larger than the dimensions listed.
2. Excavate for drain stone base. (Approximately 6")
3. Fill the excavated area with drain stone, level, and compact.
4. Place and center the steel insert on the prepared base.
5. Place blocks per the pattern shown above.

*WARNING: DO NOT place fire pit directly on concrete products. The high heat can adversely affect the integrity of the product.
WARNING: Not suitable for large fires. Fire size should not allow flame to contact the blocks.*